



Down Low Half Fender Mounting Kits



Premium Fender Options:

SS505HT- 31" Drop, Low Rider, 72" Overall Length

SS510HT- 35.5" Drop Ultimate Low Rider, 80" Overall Length

SS710HT- 35.5" Drop, **Rogue Series** Ultimate Low Rider 80" Overall Length

Mid-Grade Fender Options:

BA505HT- 31" Drop, Low Rider, 72" Overall Length


BA510HT- 35.5" Drop Ultimate Low Rider, 80" Overall Length

BA710HT- 35.5" Drop, **Rogue Series** Ultimate Low Rider 80" Overall Length


Down low brackets only work with low rider and ultimate low rider fenders. They are specifically designed to fit the unique Hogebuilt design.

TRUCK MAKE	SUSPENSION	TIRE SIZE	YEAR	KIT #	PASSENGER (RH) FRONT BRACKET	DRIVER (LH) FRONT BRACKET	CENTER BRACKET KIT
Peterbilt/ Kenworth	Flex Air/Air Glide(AG380)	All 22.5 or 24.5	Any	2DL-KIT	17722DL	17732DL	1425
Peterbilt	Air Trac	22.5 Low Pro	Any	3DL-KIT	17723DL	17733DL	1425
Peterbilt/ Kenworth	Low Air Leaf/ Air Glide (AG400L)	22.5 Low Pro	2005+	4DL-KIT	17724DL	17734DL	1425
Peterbilt/ Kenworth	Low Air Leaf/ Air Glide (AG400L)	22.5 Tall Rubber/ All 24.5	2005+	5DL-KIT	17725DL	17735DL	1425
Peterbilt	Air Trac	22.5 Tall Rubber/ All 24.5	Any	6DL-KIT	17726DL	17736DL	1425
Freightliner/ Western Star	Airliner	Any	Any	7DL-KIT	17727DL	17737DL	1425
Kenworth	Air Glide 8 Air Bag (AG100,AG200, AG400,AG460)	All 22.5 or 24.5	Any	8DL-KIT	17728DL	17738DL	1425
Peterbilt	Low Air Leaf	All 22.5 or 24.5	Pre 2005	9DL-KIT	17729DL	17739DL	1425




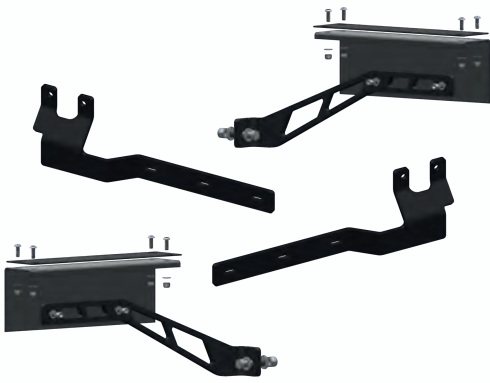


2DL-KIT

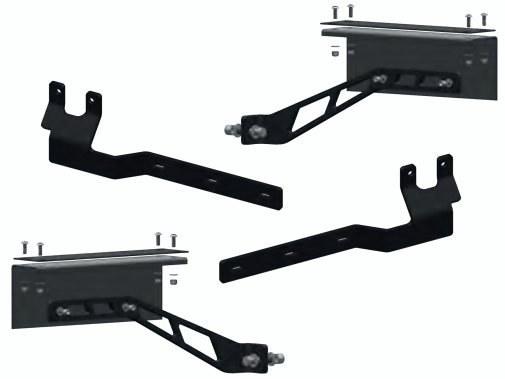


3DL-KIT

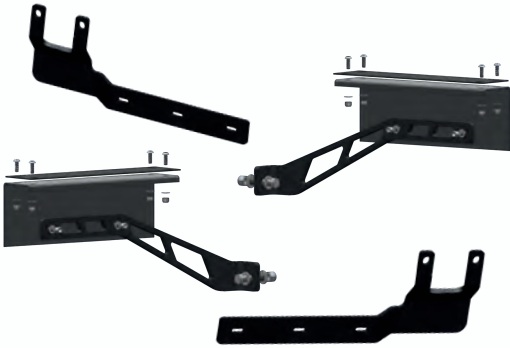


4DL-KIT

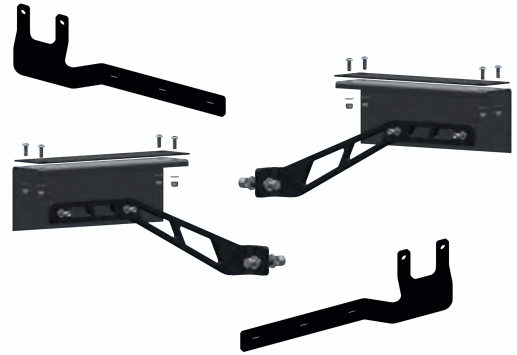

5DL-KIT

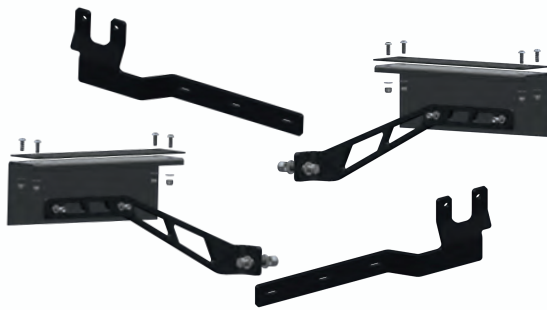


6DL-KIT

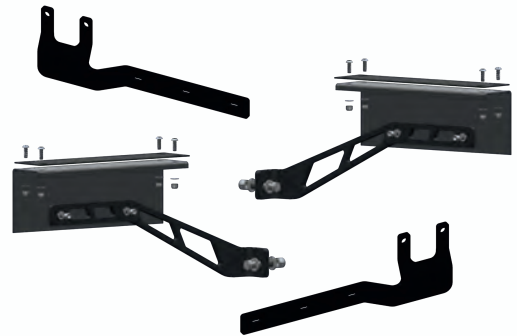

7DL-KIT



8DL-KIT

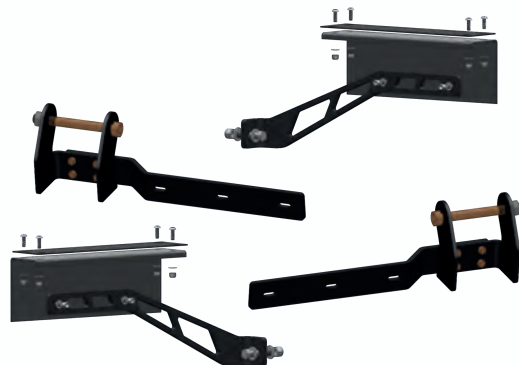

9DL-KIT