

HOGEBUILT®

THE ULTIMATE FINISH FOR TRUCKS









SEMI
Casual





PAGE DESCRIPTION

PAGE

Placing Orders	1	 CALL 800-421-1589
Company History	2	
Standard Quarter Fender Kits	3	
Half Brace Quarter Fender Kits	5	 FAX 800-421-1589
Flush Mount Quarter Fender Kits	7	
Custom Quarter Fender Kits	9	
Single Axle Fenders & Kits	11	 EMAIL sales@hogebuilt.com customerservice@hogebuilt.com
Half Tandem Fenders & Kits	13	
Custom Half Tandem Fender Kits	15	
Down Low Half Tandem Fender Brackets & Kits	17	 ONLINE hogebuilt.com
Full Tandem Fenders & Kits	19	
Tear Drop & Flanged Full Tandem Fenders	21	 SOCIAL facebook.com/hogebuilt
Custom Full Tandem Fender Kits	23	
Mounting Components & Grille	25	 SOCIAL instagram.com/hogebuilt
Claims, Returns & Warranty Information	26	

PLACING ORDERS

- EMAIL order details to customerservice@hogebuilt.com
- FAX order details to our Customer Service Team: 800-421-1589
- Contact our Customer Service Team Leader: 800-421-1589
- Order must define any unique handling, shipping or processing requirements
- Minimum order is \$250.00

FREIGHT POLICY

- All orders are FOB Springfield, TN 37172
- COD orders are not accepted
- Prepaid freight is available on orders exceeding \$5,000 in product value to customers in good standing
(1 order/1 destination in the continental U.S.)
- Prepaid freight carrier and routing is at Hogebuilt's discretion



SINCE 1944

In 1944, Ernest (Ernie) Hoge began handcrafting small trailer fenders in Lynwood, CA, under the name Hogebuilt. Ernie was a master metalworker and developed a unique process of hand rolling each fender to create a smooth, wrinkle free finish. In the beginning, he manufactured fenders for horse trailers, motorcycles and boat trailers.

Sourcing steel for Hogebuilt fenders allowed Ernie to befriend George Lombino, the Vice President of a steel company in Los Angeles and former truck driver. They worked together for almost thirty years until 1972, when Ernie retired and sold the company to George. To ensure the craftsmanship and quality of Hogebuilt continued, Ernie worked alongside George's son, George Jr., for a year teaching him on all the techniques he had developed.

The following year, George Jr. attended a trucking show in Anaheim, CA which sparked the idea to build show-quality stainless steel fenders for big rigs. Thus, in 1973, Hogebuilt introduced 24" fenders, and soon thereafter they began manufacturing 27", 30" and 34" quarter fenders, as well as full and half-tandem fenders.

In the early years, Hogebuilt fenders were made of chrome-plated steel that was subject to chipping when dinged. As a solution to this problem, and to enhance the look of their products, the Lombino's began using 304 Stainless Steel that featured a non-directional polished finish. This finish is basically a mirror. The fenders continued to feature a 3-inch side flange which remains the largest in the industry today. It was around this same time that they introduced brackets that were custom fit for each type of suspension to eliminate the need for drilling extra holes in the frame.


After working hard for over 30 years, George Sr. sought retirement, but George Jr. did not want to continue without his dad next to him. It was at that time, in 2004, that Hogebuilt was purchased by the Marmon Group. A few years later, the company relocated from Southern California to Springfield, TN, where it resides today. Throughout all the moves and acquisitions, Hogebuilt continues making quality, handcrafted products and providing unsurpassed customer service.

75 years later, Hogebuilt remains the recognized leader in the manufacturing of premium quality truck and trailer spray suppression systems. We now offer a complete line of quarter, tandem and half-tandem fenders manufactured of premium 304 stainless steel with a mirror finish for a lasting image. Our engineered custom brackets integrate the fenders with a suspension system for sustained reliability. Hogebuilt has since added a mid-grade line of fenders produced in 430 stainless steel with a mirror shine finish. All of our Hogebuilt fenders are handcrafted in the U.S.A.


Hogebuilt quarter fenders and custom brackets are factory installed options on select trucks for Peterbilt and Kenworth factories. Contact your local Chrome Shop, Peterbilt or Kenworth dealer for genuine Hogebuilt Products.

**27" FENDER**


Part #	Description	Finish	Weight	UOM
Q127	Premium 304 SS 16 Ga.	Perfect Mirror	47 lbs.	PR
M127	Mid-Grade 430 SS 16 Ga.	Mirror Shine	47 lbs.	PR

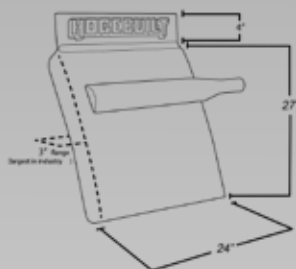
**30" FENDER**

Part #	Description	Finish	Weight	UOM
Q130	Premium 304 SS 16 Ga.	Perfect Mirror	52 lbs.	PR
M130	Mid-Grade 430 SS 16 Ga.	Mirror Shine	52 lbs.	PR

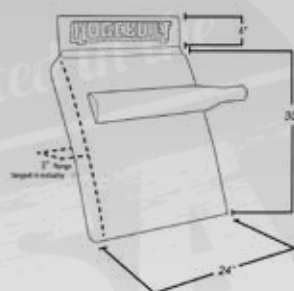**34" FENDER**

Part #	Description	Finish	Weight	UOM
Q134	Premium 304 SS 16 Ga.	Perfect Mirror	56 lbs.	PR
M134	Mid-Grade 430 SS 16 Ga.	Mirror Shine	56 lbs.	PR

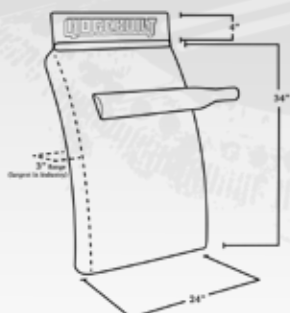

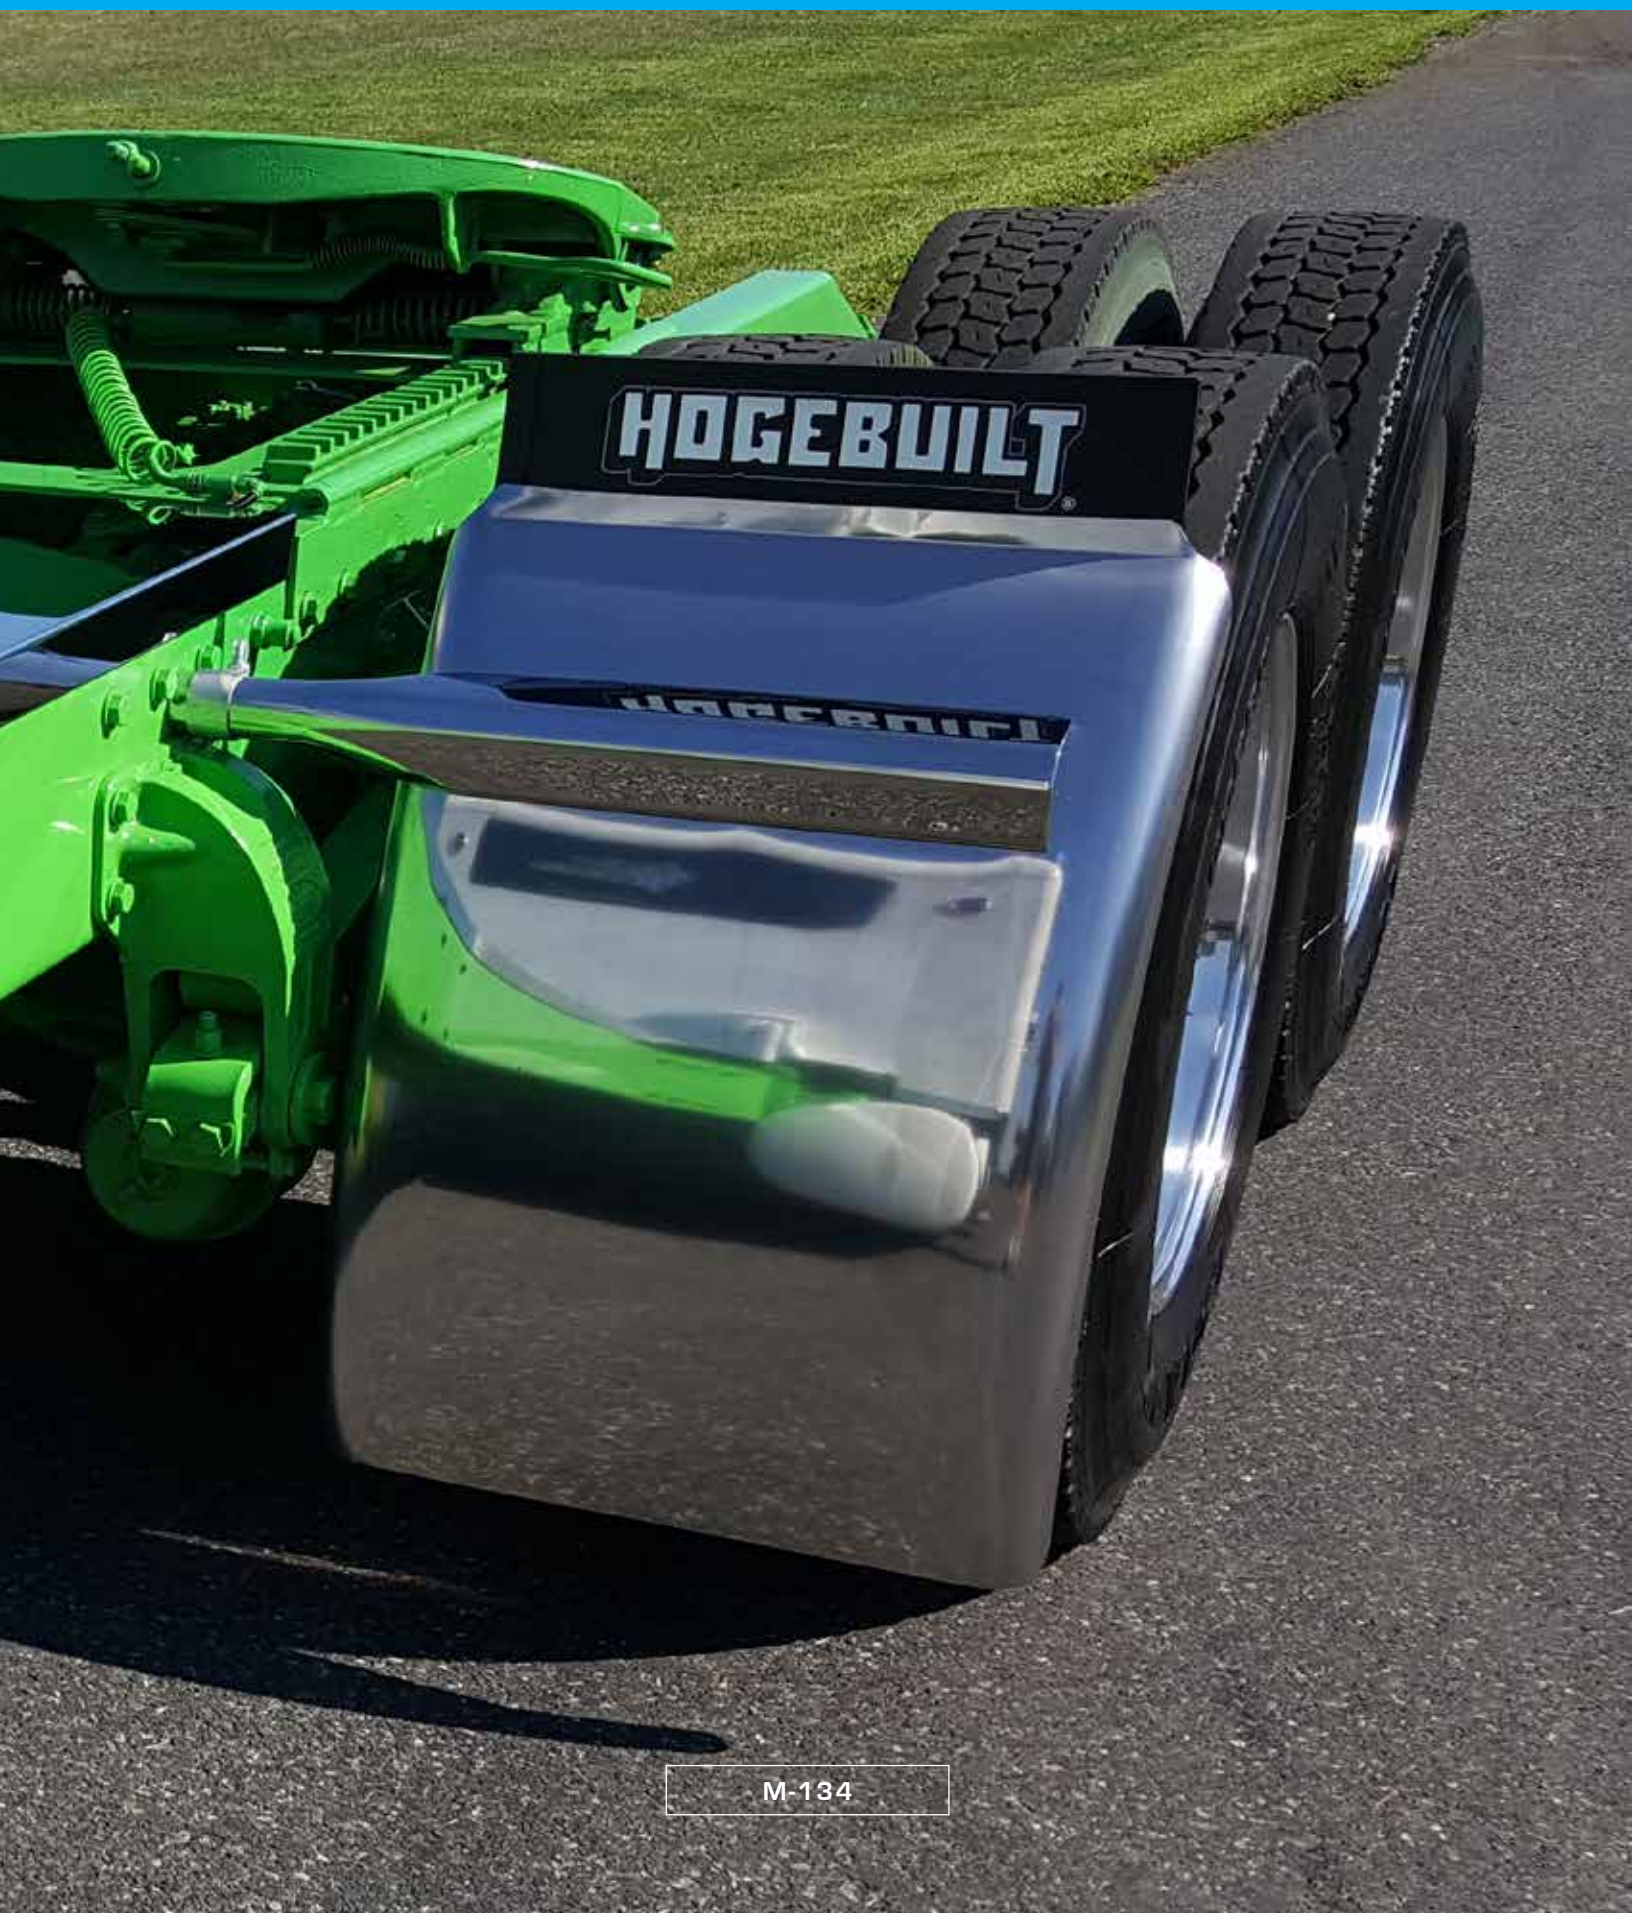


M-134




30" FENDER

Part #	Description	Finish	Weight	UOM
SL100424	Premium 304 SS 16 Ga.	Perfect Mirror	56 lbs.	PR
HB130	Mid-Grade 430 SS 16 Ga.	Mirror Shine	56 lbs.	PR

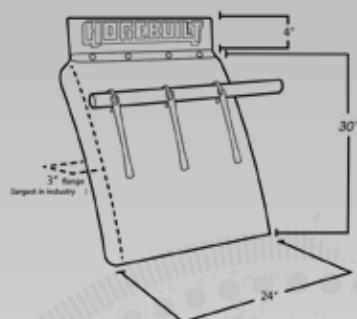

34" FENDER

Part #	Description	Finish	Weight	UOM
JL100424	Premium 304 SS 16 Ga.	Perfect Mirror	59 lbs.	PR
HB134	Mid-Grade 430 SS 16 Ga.	Mirror Shine	59 lbs.	PR

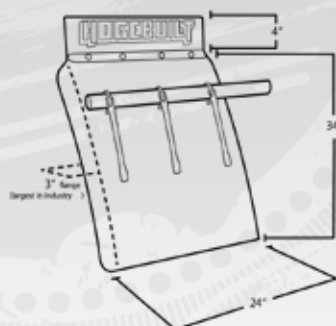



NEW


**Mid-Grade
Options Available!**

JL100424




27" FENDER

Part #	Description	Finish	Weight	UOM
FM127	Mid-Grade 430 SS 16 Ga.	Mirror Shine	50 lbs.	PR

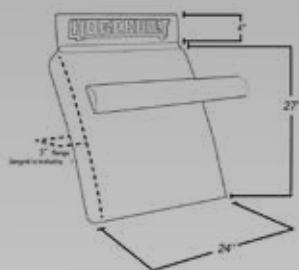


30" FENDER

Part #	Description	Finish	Weight	UOM
SL1006FM1	Premium 304 SS 16 Ga.	Perfect Mirror	59 lbs.	PR
FM130	Mid-Grade 430 SS 16 Ga.	Mirror Shine	59 lbs.	PR

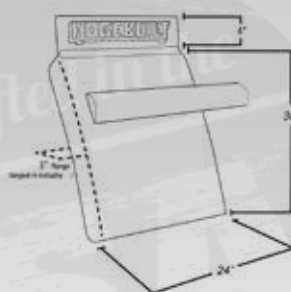

34" FENDER

Part #	Description	Finish	Weight	UOM
JL1006FM1	Premium 304 SS 16 Ga.	Perfect Mirror	66 lbs.	PR
FM134	Mid-Grade 430 SS 16 Ga.	Mirror Shine	66 lbs.	PR

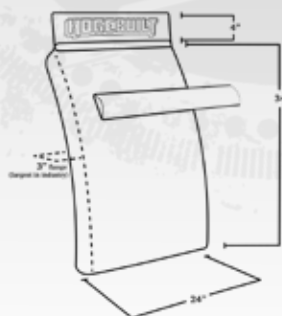



PATENTED
SINGLE BOLT
DESIGN

NEW

Mid-Grade
Options Available!

JL1006FM1

1

SELECT FENDER SIZE



SL1006

30" Premium
304 SS 16 Ga.
Perfect Mirror
Finish



JL1006

34" Premium
304 SS 16 Ga.
Perfect Mirror
Finish

2

USE THE CHART BELOW TO IDENTIFY KIT SUFFIX

Truck Make	Suspension	Tire Size	Year	Passenger RH-Bracket	Driver LH-Bracket	Kit Suffix
Peterbilt	Air Leaf	Any 22.5 or 24.5	1993+	17541PB	17551PB	1PB
Peterbilt	Air Trac	Any 22.5 or 24.5	Any	17546PB	17556PB	6PB
Peterbilt	Flex Air	Any 22.5 or 24.5	Any	17542PB	17552PB	2PB
Peterbilt	Low Air	11R-24.5 (Tall Rubber)	Pre 2005	17549PB	17559PB	9PB
Peterbilt	Low Air	11R-24.5 (Tall Rubber)	2005+	17545PB	17555PB	5PB
Peterbilt	Low Air	22.5 (Low Pro)	Pre 2005	17549PB	17559PB	9PB
Peterbilt	Low Air	22.5 (Low Pro)	2005+	17544PB	17554PB	4PB
Peterbilt	Low Air	24.5 (Low Pro)	Pre 2005	17549PB	17559PB	9PB
Peterbilt	Low Air	24.5 (Low Pro)	2005+	17544PB	17554PB	4PB
Kenworth	AG380	Any 22.5 or 24.5	Any	17542PB	17552PB	2PB
Kenworth	AG400L	11R-24.5 (Tall Rubber)	Any	17545PB	17555PB	5PB
Kenworth	AG400L	Any 22.5 or 24.5	Any	17544PB	17554PB	4PB
Kenworth	Air Ride (AG400)	Any 22.5 or 24.5	Any	FM2012	FM2012	FM1
Kenworth	Air Ride (AG460)	Any 22.5 or 24.5	Any	FM2012	FM2012	FM1
Freightliner	Air Liner	Any 22.5 or 24.5	Any	1754FL5	1755FL5	FL5
Western Star	Air Liner	Any 22.5 or 24.5	Any	1754FL5	1755FL5	FL5
International	Any	Any 22.5 or 24.5	Any	FM2012	FM2012	FM1
Volvo/Mack	Any	Any 22.5 or 24.5	Any	FM2012	FM2012	FM1
Western Star	Any	Any 22.5 or 24.5	Any	FM2012	FM2012	FM1

Note: Kit includes fenders (2), Hogebuilt top flaps (2), RH Bracket, LH Bracket and hardware.

3 ADD KIT SUFFIX TO FENDER PART NUMBER

EXAMPLE

Fender: JL1006
Truck Make: Peterbilt
Suspension: Low Air
Tire Size: 22.5 (Low Pro)
Year: 2010
Kit Suffix: 4PB

KIT PART


JL1006**4PB**




Hogebuilt Customer Service (800) 421-1589

4 PLACE ORDER FOR KIT PART NUMBER


1PB

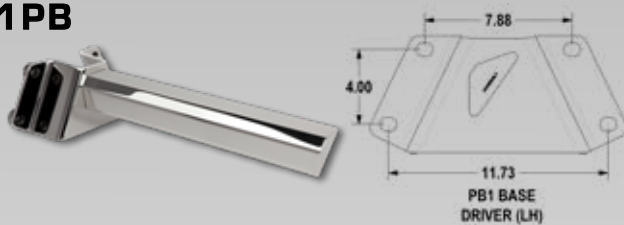


2PB

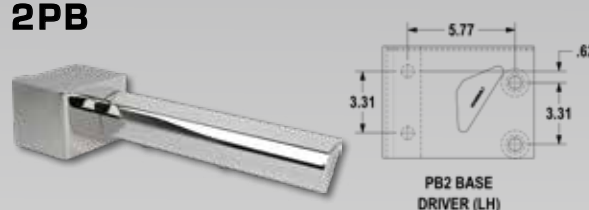

4PB

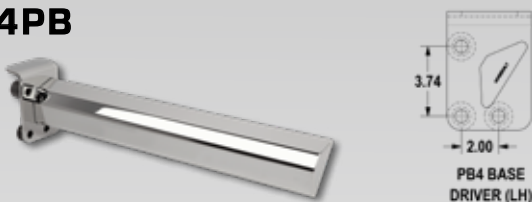


5PB

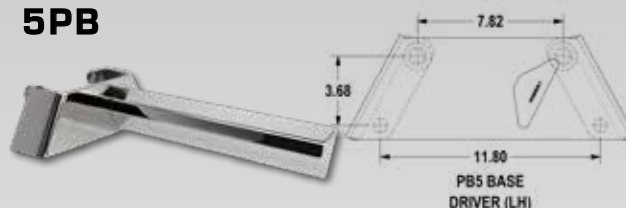


6PB



9PB

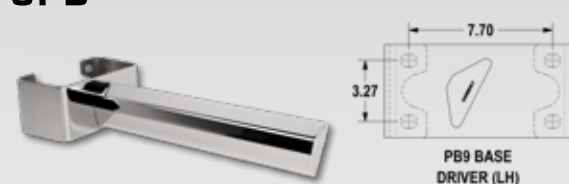

FL5

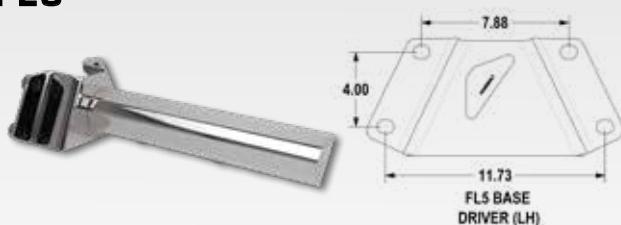

FM1

Universal




Patented Single Bolt Design
(see page 25)






STANDARD

Part #	Description	Finish	Weight	UOM
3706P	Premium 304 SS 14 Ga.	Perfect Mirror	90 lbs.	PR
3706P-KIT	Premium 304 SS 14 Ga. w/ SA-KIT	Perfect Mirror	120 lbs.	KIT*
2706	Mid-Grade 430 SS 14 Ga.	Mirror Shine	90 lbs.	PR
2706-KIT	Mid-Grade 430 SS 14 Ga. w/ SA-KIT	Mirror Shine	120 lbs.	KIT*

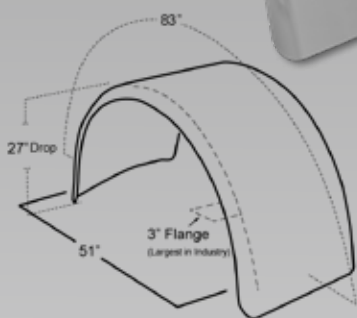


LOW RIDER

Part #	Description	Finish	Weight	UOM
3756P	Premium 304 SS 14 Ga.	Perfect Mirror	98 lbs.	PR
3756P-KIT	Premium 304 SS 14 Ga. w/ SA-KIT	Perfect Mirror	128 lbs.	KIT*
2756	Mid-Grade 430 SS 14 Ga.	Mirror Shine	98 lbs.	PR
2756-KIT	Mid-Grade 430 SS 14 Ga. w/ SA-KIT	Mirror Shine	128 lbs.	KIT*

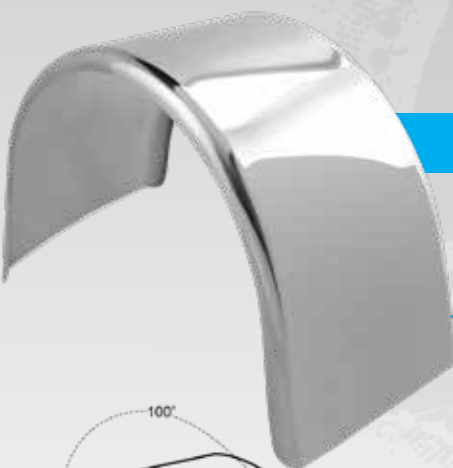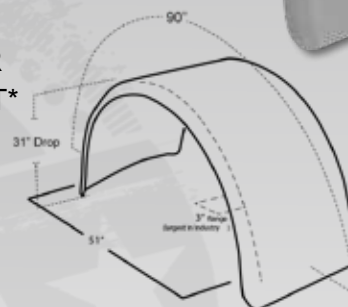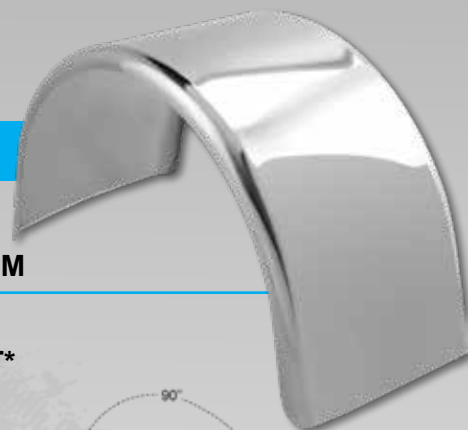

ULTIMATE LOW RIDER


Part #	Description	Finish	Weight	UOM
3710P	Premium 304 SS 14 Ga.	Perfect Mirror	108 lbs.	PR
3710P-KIT	Premium 304 SS 14 Ga. w/ SA-KIT	Perfect Mirror	138 lbs.	KIT*
2710	Mid-Grade 430 SS 14 Ga.	Mirror Shine	108 lbs.	PR
2710-KIT	Mid-Grade 430 SS 14 Ga. w/ SA-KIT	Mirror Shine	138 lbs.	KIT*

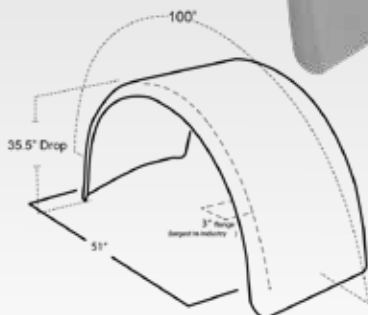


* Fender kits include a pair of fenders and part # SA-KIT (see page 12)




UNIVERSAL MOUNTING OPTIONS

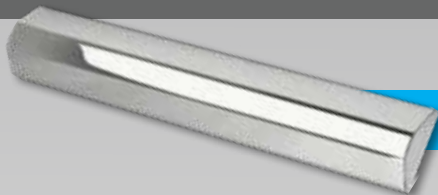**FM2012**

Install Style	Description	Finish	UOM
Universal - Flush Mount	28" 304 SS 12 Ga. Bracket <i>Hardware Included</i>	Perfect Mirror Finish	Each

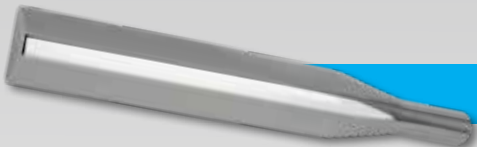**MQ2012**


Install Style	Description	Finish	UOM
Universal - Post Mount	28" 304 SS 12 Ga. Bracket <i>Clamp & Hardware Included</i>	Perfect Mirror Finish	Each

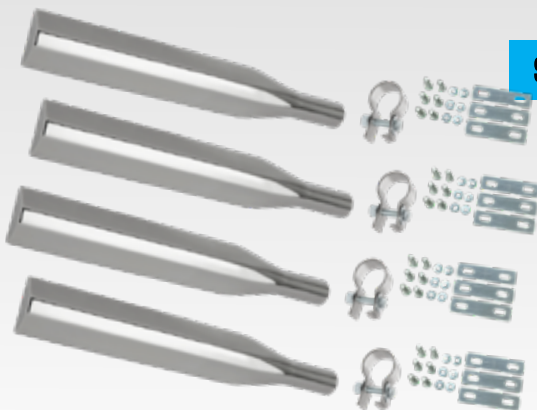**SA-KIT**

Install Style	Description
Universal - Post Mount <i>Post mount sold separately</i>	Single Axle Mounting Kit <i>Kit includes:</i> (4) MQ2012 (4) Clamps & hardware


STANDARD

Part #	Description	Finish	Weight	UOM
SS500HT	Premium 304 SS 14 Ga.	Perfect Mirror	80 lbs.	PR
BA500HT	Mid-Grade 430 SS 14 Ga.	Mirror Shine	80 lbs.	PR
BA500HT-KIT	Mid-Grade 430 SS 14 Ga. w/HT-KIT	Mirror Shine	124 lbs.	KIT*

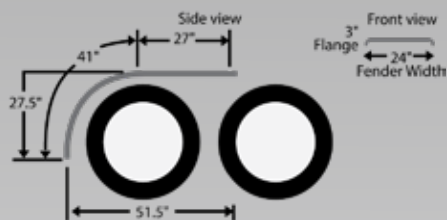


LOW RIDER

Part #	Description	Finish	Weight	UOM
SS505HT	Premium 304 SS 14 Ga.	Perfect Mirror	90 lbs.	PR
BA505HT	Mid-Grade 430 SS 14 Ga.	Mirror Shine	90 lbs.	PR
BA505HT-KIT	Mid-Grade 430 SS 14 Ga. w/HT-KIT	Mirror Shine	134 lbs.	KIT*

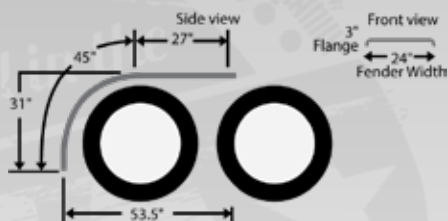

ULTIMATE LOW RIDER


Part #	Description	Finish	Weight	UOM
SS510HT	Premium 304 SS 14 Ga.	Perfect Mirror	94 lbs.	PR
BA510HT	Mid-Grade 430 SS 14 Ga.	Mirror Shine	94 lbs.	PR
BA510HT-KIT	Mid-Grade 430 SS 14 Ga. w/ HT-KIT	Mirror Shine	138 lbs.	KIT*

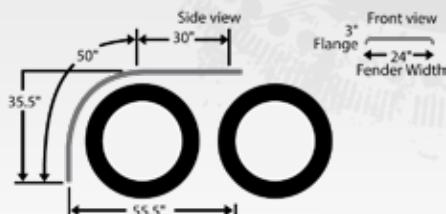

* Fender kits include a pair of fenders and part # HT-KIT (see page 14)


SS510HT-PB4

See pages 15-18 for Custom Mounting Options **UNIVERSAL MOUNTING OPTIONS**

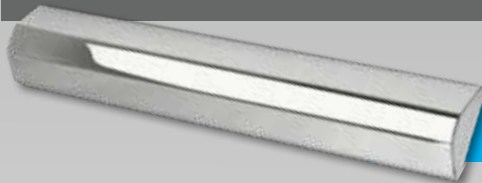


FM2012

Install Style	Description	Finish	UOM
Universal - Flush Mount	28" 304 SS 12 Ga. Bracket <i>Hardware Included</i>	Perfect Mirror Finish	Each

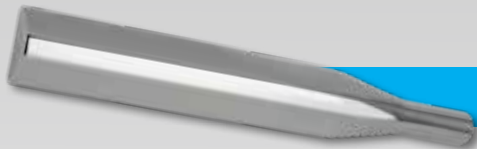

MQ2012

Install Style	Description	Finish	UOM
Universal - Post Mount	28" 304 SS 12 Ga. Bracket <i>Clamp & Hardware Included</i>	Perfect Mirror Finish	Each

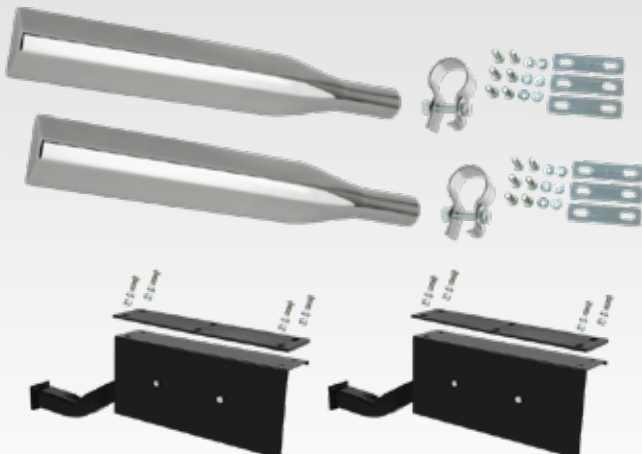

HT-KIT

Install Style	Description
Universal - Post Mount <i>Post mount sold separately</i>	Half Tandem Mounting Kit Kit includes: (2) MQ2012 (1) 1406-6A (2) Clamps & hardware

1

SELECT FENDER SIZE

SS500HT

Standard



SS505HT

Low Rider



SS510HT

Ultimate Low Rider



2

USE THE CHART BELOW TO IDENTIFY KIT SUFFIX

Truck Make	Suspension	Tire Size	Year	Passenger RH-Bracket	Driver LH-Bracket	Rear Bracket	Kit Suffix
Peterbilt	Air Leaf	Any 22.5 or 24.5	1993+	17721PB	17731PB	1406-6A	PB1
Peterbilt	Flex Air	Any 22.5 or 24.5	Any	17722PB	17732PB	1406-6A	PB2
Peterbilt	Air Trac	22.5 (Low Pro)	Any	17723PB	17733PB	1406-6A	PB3
Peterbilt	Air Trac	22.5 (Tall Rubber)	Any	17723PB	17733PB	1406-6A	PB3
Peterbilt	Air Trac	24.5 (Low Pro)	Any	17723PB	17733PB	1406-6A	PB3
Peterbilt	Air Trac	11R-24.5 (Tall Rubber)	Any	17726PB	17736PB	1406-6A	PB6
Peterbilt	Low Air	22.5 (Low Pro)	Pre 2005	17729PB	17739PB	1406-6A	PB9
Peterbilt	Low Air	22.5 (Low Pro)	2005+	17724PB	17734PB	1406-6A	PB4
Peterbilt	Low Air	22.5 (Tall Rubber)	Pre 2005	17729PB	17739PB	1406-6A	PB9
Peterbilt	Low Air	22.5 (Tall Rubber)	2005+	17724PB	17734PB	1406-6A	PB4
Peterbilt	Low Air	24.5 (Low Pro)	Pre 2005	17729PB	17739PB	1406-6A	PB9
Peterbilt	Low Air	24.5 (Low Pro)	2005+	17724PB	17734PB	1406-6A	PB4
Peterbilt	Low Air	11R-24.5 (Tall Rubber)	Pre 2005	17729PB	17739PB	1406-6A	PB9
Peterbilt	Low Air	11R-24.5 (Tall Rubber)	2005+	17725PB	17735PB	1406-6A	PB5
Kenworth	AG380	Any 22.5 or 24.5	Any	17722PB	17732PB	1406-6A	PB2
Kenworth	Air Ride (AG100)	Any 22.5 or 24.5	Any	FM2012	FM2012	1406-6A	KW9
Kenworth	Air Ride (AG400)	Any 22.5 or 24.5	Any	FM2012	FM2012	1406-6A	KW9
Kenworth	Air Ride (AG460)	Any 22.5 or 24.5	Any	FM2012	FM2012	1406-6A	KW9
Kenworth	AG400L	22.5 (Low Pro)	Any	17724PB	17734PB	1406-6A	PB4
Kenworth	AG400L	22.5 (Tall Rubber)	Any	17724PB	17734PB	1406-6A	PB4
Kenworth	AG400L	24.5 (Low Pro)	Any	17724PB	17734PB	1406-6A	PB4
Kenworth	AG400L	11R-24.5 (Tall Rubber)	Any	17725PB	17735PB	1406-6A	PB5
Freightliner	Air Liner	Any 22.5 or 24.5	Any	1772FL5	1773FL5	1406-6A	FL5
Western Star	Air Liner	Any 22.5 or 24.5	Any	1772FL5	1773FL5	1406-6A	FL5
International	Any	Any 22.5 or 24.5	Any	FM2012	FM2012	1406-6A	KW9
Volvo/Mack	Any	Any 22.5 or 24.5	Any	FM2012	FM2012	1406-6A	KW9
Western Star	Any	Any 22.5 or 24.5	Any	FM2012	FM2012	1406-6A	KW9

Note: Kit includes fenders (2), RH Bracket, LH Bracket, 1406-6A and hardware.

3 ADD KIT SUFFIX TO FENDER PART NUMBER

EXAMPLE

Fender: SS505HT
Truck Make: Kenworth
Suspension: AG380
Tire Size: 24.5 (Low Pro)
Year: 2017
Kit Suffix: -PB2

KIT PART

SS505HT-PB2



PB2 BRACKET


Hogebuilt Customer Service (800) 421-1589

4 PLACE ORDER FOR KIT PART NUMBER


PB1



PB2

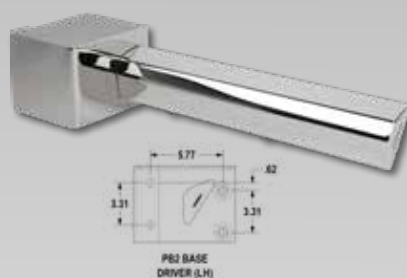

PB3

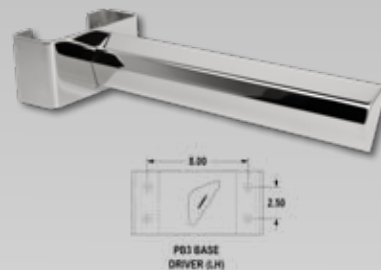

PB4




PB5



PB6



PB9

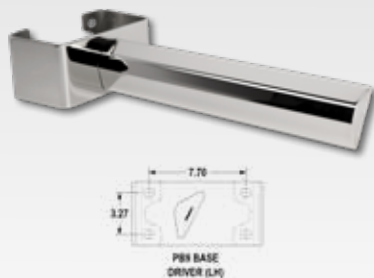

FL5



KW9 (universal)



Patented Single Bolt Design
(see page 25)



NEW PRODUCT

FEATURES & BENEFITS

- Mounts lower and from behind unlike traditional mounts
- For use with premium and mid-grade Low Rider and Ultimate Low Rider fenders
 - Specific to Peterbilt & Kenworth suspensions
 - Reduced installation time

1

SELECT FENDER SIZE

SS505HT/BA505HT

Low Rider



SS510HT/BA510HT

Ultimate Low Rider



2 USE THE CHART BELOW TO IDENTIFY MOUNTING KIT PART NUMBER

Truck Make	Suspension	Tire Size	Year	Passenger RH-Bracket	Driver LH-Bracket	Rear Bracket	Kit Suffix
Peterbilt	Flex Air	Any 22.5 or 24.5	Any	17722DL	17732DL	1406-6A	2DL-KIT
Peterbilt	Low Air	22.5 (Low Pro)	2005+	17724DL	17734DL	1406-6A	4DL-KIT
Peterbilt	Low Air	22.5 (Tall Rubber)	2005+	17724DL	17734DL	1406-6A	4DL-KIT
Peterbilt	Low Air	24.5 (Low Pro)	2005+	17724DL	17734DL	1406-6A	4DL-KIT
Peterbilt	Low Air	11R-24.5 (Tall Rubber)	2005+	17725DL	17735DL	1406-6A	5DL-KIT
Kenworth	AG380	Any 22.5 or 24.5	Any	17722DL	17732DL	1406-6A	2DL-KIT
Kenworth	AG400L	22.5 (Low Pro)	Any	17724DL	17734DL	1406-6A	4DL-KIT
Kenworth	AG400L	22.5 (Tall Rubber)	Any	17724DL	17734DL	1406-6A	4DL-KIT
Kenworth	AG400L	24.5 (Low Pro)	Any	17724DL	17734DL	1406-6A	4DL-KIT
Kenworth	AG400L	11R-24.5 (Tall Rubber)	Any	17725DL	17735DL	1406-6A	5DL-KIT

Note: Kit includes RH Bracket, LH Bracket, 1406-6A and hardware (they do not include fenders).

3 PLACE ORDER FOR FENDER AND DL KIT SEPARATELY

EXAMPLE

Fender: SS505HT
 Truck Make: Peterbilt
 Suspension: Low Air
 Tire Size: 22.5 (Low Pro)
 Year: 2020

ORDER THESE PARTS

SS505HT

4DL-KIT



2DL-KIT




4DL-KIT



5DL-KIT




STANDARD

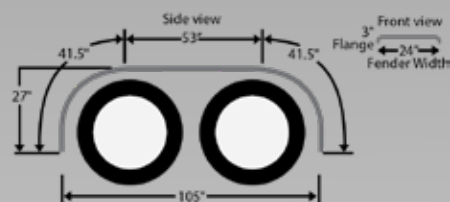

Part #	Description	Finish	Weight	UOM
9506	Premium 304 SS 14 Ga.	Perfect Mirror	157 lbs.	PR
5506	Mid-Grade 430 SS 14 Ga.	Mirror Shine	157 lbs.	PR
5506-KIT	Mid-Grade 430 SS 14 Ga. w/ FT-KIT	Mirror Shine	217 lbs.	PR*



LOW RIDER

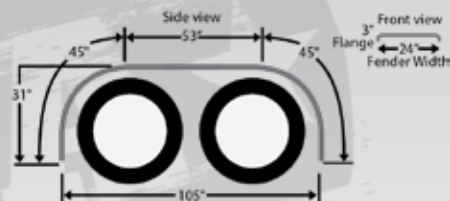

Part #	Description	Finish	Weight	UOM
9556	Premium 304 SS 14 Ga.	Perfect Mirror	170 lbs.	PR
5556	Mid-Grade 430 SS 14 Ga.	Mirror Shine	170 lbs.	PR
5556-KIT	Mid-Grade 430 SS 14 Ga. w/ FT-KIT	Mirror Shine	230 lbs.	PR

* Fender kits include a pair of fenders and part # FT-KIT (see page 20).




See pages 23-24 for Custom Mounting Options **UNIVERSAL MOUNTING OPTIONS**




FM2012

Install Style	Description	Finish	UOM
Universal - Flush Mount	28" 304 SS 12 Ga. Bracket <i>Hardware Included</i>	Perfect Mirror Finish	Each

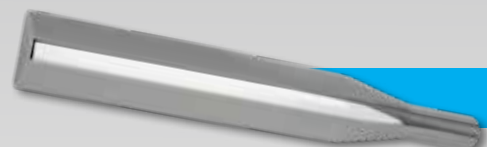

MQ2012

Install Style	Description	Finish	UOM
Universal - Post Mount	28" 304 SS 12 Ga. Bracket <i>Clamp & Hardware Included (each)</i>	Perfect Mirror Finish	Each

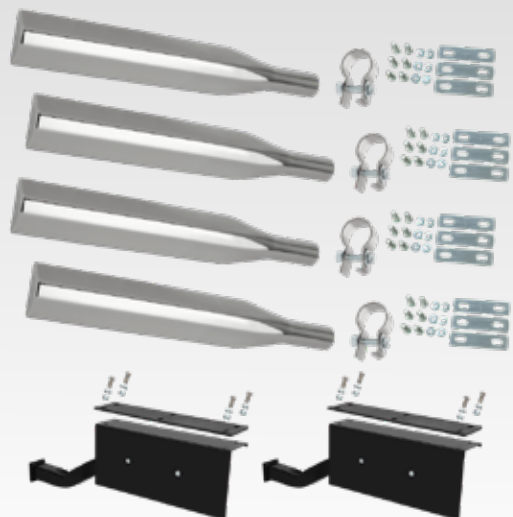


FT-KIT

Install Style	Description
Universal - Post Mount <i>Post mount sold separately</i>	Full Tandem Mounting Kit <i>Kit includes:</i> (4) MQ2012 (1) 1406-6A (4) Clamps & hardware

TEAR DROP & FLANGED FULL TANDEM FENDERS




TEAR DROP

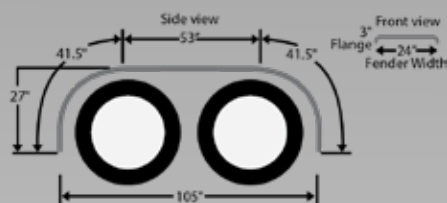

Part #	Description	Finish	Weight	UOM
9506T	Premium 304 SS 14 Ga.	Perfect Mirror	161 lbs.	PR




TEAR DROP LOW RIDER

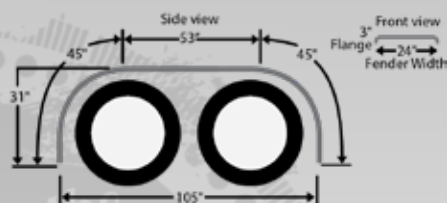

Part #	Description	Finish	Weight	UOM
9556T	Premium 304 SS 14 Ga.	Perfect Mirror	174 lbs.	PR




FLANGED

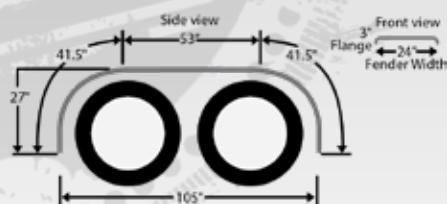

Part #	Description	Finish	Weight	UOM
9506TF	Premium 304 SS 14 Ga.	Perfect Mirror	161 lbs.	PR



FLANGED LOW RIDER

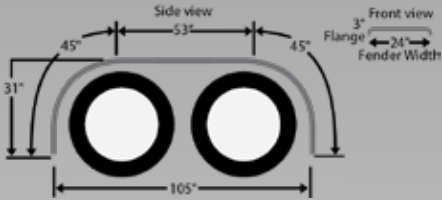

Part #	Description	Finish	Weight	UOM
9556TF	Premium 304 SS 14 Ga.	Perfect Mirror	174 lbs.	PR

See pages 23-24 for Custom Mounting Options **CUSTOM MOUNTING OPTIONS**



9556TF-PB5

1

SELECT FENDER SIZE




2

USE THE CHART BELOW TO IDENTIFY KIT SUFFIX

Truck Make	Suspension	Tire Size	Year	Front Pass. RH-Bracket	Front Driver LH-Bracket	Center Bracket	Rear Pass. RH-Bracket	Rear Driver LH-Bracket	Kit Suffix
Peterbilt	Air Leaf	Any 22.5 or 24.5	1993+	17721PB	17731PB	1406-6A	FM2012	FM2012	-PB1
Peterbilt	Flex Air	Any 22.5 or 24.5	Any	17722PB	17732PB	1406-6A	1776	1775	-PB2
Peterbilt	Air Trac	22.5 (Low Pro)	Any	17723PB	17733PB	1406-6A	FM2012	FM2012	-PB3
Peterbilt	Air Trac	22.5 (Tall Rubber)	Any	17723PB	17733PB	1406-6A	FM2012	FM2012	-PB3
Peterbilt	Air Trac	24.5 (Low Pro)	Any	17723PB	17733PB	1406-6A	FM2012	FM2012	-PB3
Peterbilt	Air Trac	11R-24.5 (Tall Rubber)	Any	17726PB	17736PB	1406-6A	FM2012	FM2012	-PB6
Peterbilt	Low Air	22.5 (Low Pro)	Pre 2005	17729PB	17739PB	1406-6A	FM2012	FM2012	-PB9
Peterbilt	Low Air	22.5 (Low Pro)	2005+	17724PB	17734PB	1406-6A	FM2012	FM2012	-PB4
Peterbilt	Low Air	22.5 (Tall Rubber)	Pre 2005	17729PB	17739PB	1406-6A	FM2012	FM2012	-PB9
Peterbilt	Low Air	22.5 (Tall Rubber)	2005+	17724PB	17734PB	1406-6A	FM2012	FM2012	-PB4
Peterbilt	Low Air	24.5 (Low Pro)	Pre 2005	17729PB	17739PB	1406-6A	FM2012	FM2012	-PB9
Peterbilt	Low Air	24.5 (Low Pro)	2005+	17724PB	17734PB	1406-6A	FM2012	FM2012	-PB4
Peterbilt	Low Air	11R-24.5 (Tall Rubber)	Pre 2005	17729PB	17739PB	1406-6A	FM2012	FM2012	-PB9
Peterbilt	Low Air	11R-24.5 (Tall Rubber)	2005+	17725PB	17735PB	1406-6A	FM2012	FM2012	-PB5
Kenworth	AG380	Any 22.5 or 24.5	Any	17722PB	17732PB	1406-6A	1776	1775	-PB2
Kenworth	Air Ride (AG100)	Any 22.5 or 24.5	Any	FM2012	FM2012	1406-6A	FM2012	FM2012	-KW9
Kenworth	Air Ride (AG400)	Any 22.5 or 24.5	Any	FM2012	FM2012	1406-6A	FM2012	FM2012	-KW9
Kenworth	Air Ride (AG460)	Any 22.5 or 24.5	Any	FM2012	FM2012	1406-6A	FM2012	FM2012	-KW9
Kenworth	AG400L	22.5 (Low Pro)	Any	17724PB	17734PB	1406-6A	FM2012	FM2012	-PB4
Kenworth	AG400L	22.5 (Tall Rubber)	Any	17724PB	17734PB	1406-6A	FM2012	FM2012	-PB4
Kenworth	AG400L	24.5 (Low Pro)	Any	17724PB	17734PB	1406-6A	FM2012	FM2012	-PB4
Kenworth	AG400L	11R-24.5 (Tall Rubber)	Any	17725PB	17735PB	1406-6A	FM2012	FM2012	-PB5
Freightliner	Air Liner	Any 22.5 or 24.5	Any	1772FL5	1773FL5	1406-6A	FM2012	FM2012	-FL5
Western Star	Air Liner	Any 22.5 or 24.5	Any	1772FL5	1773FL5	1406-6A	FM2012	FM2012	-FL5
International	Any	Any 22.5 or 24.5	Any	FM2012	FM2012	1406-6A	FM2012	FM2012	-KW9
Volvo/Mack	Any	Any 22.5 or 24.5	Any	FM2012	FM2012	1406-6A	FM2012	FM2012	-KW9
Western Star	Any	Any 22.5 or 24.5	Any	FM2012	FM2012	1406-6A	FM2012	FM2012	-KW9

Note: Kit includes fenders (2), RH Bracket, LH Bracket, 1406-6A and hardware.

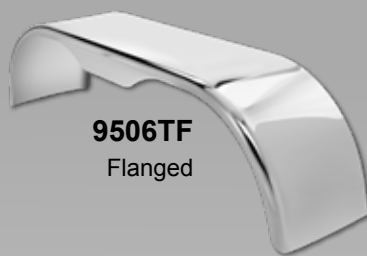

3

**ADD KIT SUFFIX TO
FENDER PART NUMBER**

EXAMPLE










KIT PART #

Fender: 9556T
Truck Make: Peterbilt
Suspension: Low Air
Tire Size: 24.5 (Low Pro)
Year: 2019
Kit Suffix: -PB4

9556T-PB4


4

**PLACE ORDER FOR
KIT PART NUMBER**

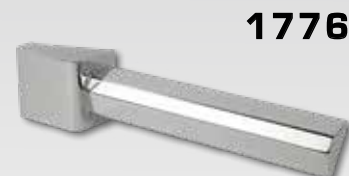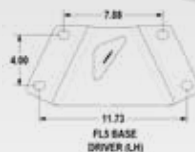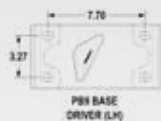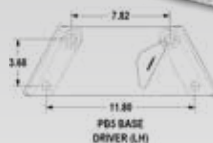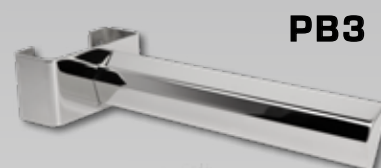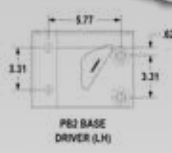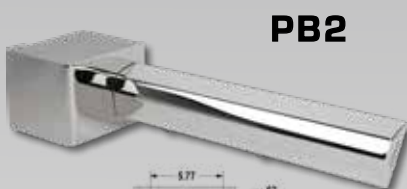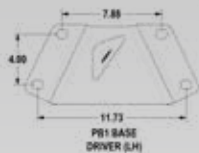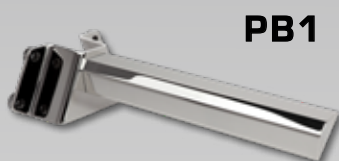

**Patented Single
Bolt Design**
(see page 25)



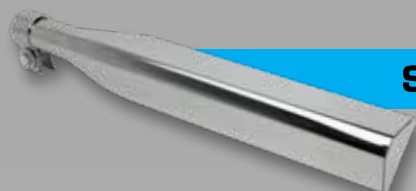

STANDARD MOUNT


Part No.	Description
MV2000	430 SS 14 Gauge Mirror Shine (Each) Quarter Fender Applications - M124, M127, M130
MQ2000	304 SS 14 Gauge Perfect Mirror Finish (Each) Quarter Fender Applications - Q124, Q127, Q130
MQ2012	304 SS 12 Gauge Perfect Mirror Finish (Each) Single Axle, Half Tandem and Full Tandem Applications. Quarter Fender Applications - M134 & Q134

F-15

HOGEBUILT


Vinyl Top Flap (Each)

1406-6A

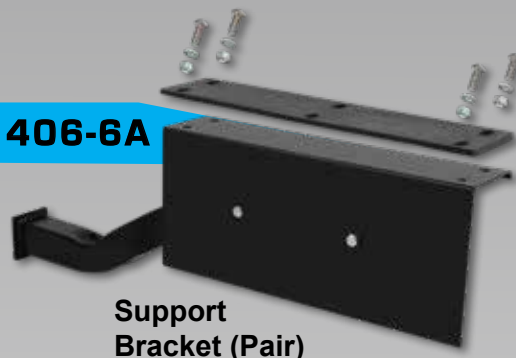

Support
Bracket (Pair)

1447

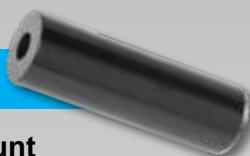

8" Post Mount
(Each)

1538SS



Stainless Steel
Clamp (Each)



1518

U-Bolt Hardware (Kit)


FLUSH MOUNT

304 Stainless Steel 12 Gauge
Perfect Mirror Finish for
Quarter, Half, Full, Single
and Trailer Applications

Part No.	Description
T1825P	22" Length (Each)
T1855P	23" Length (Each)
T1835P	26" Length (Each)
T1845P	27" Length (Each)
FM2012	28" Length (Each)

1633

28" arm, 304 Stainless Steel Tube
Mirror Finish, Quarter Fender Applications
(each)

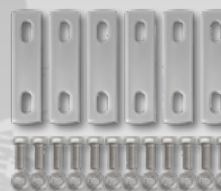

1520

Back Plate
Hardware (Kit)

GR530

Freightliner
Classic XL Grille
(FLD-120)



Single bolt
installation,
no post mount
required



CLAIMS FOR SHORTAGES

- Shortages must be reported to Hogebuilt Customer Service in writing within four (4) working days from the carrier's delivery date. Customer is responsible for checking and reporting any errors at the time of delivery before signing the bill of lading. If no discrepancy is reported within the allotted time, Customer agrees that the BOL/Packing Slip contents were received as shipped.
- Claims for shortages must include the following information:
 - > Invoice Number / Date of receipt / Carrier and PRO number

CLAIMS FOR DAMAGED MERCHANDISE

- All items are sold FOB Hogebuilt manufacturing plant, Springfield, TN. Ownership of the product is transferred to the customer at the point it leaves our facility. Hogebuilt packaging practices have been developed and standardized to protect product under normal transit conditions. Never-the-less, occasional damage occurs in transit.
- Product received with any signs of damage or distress must be identified on all copies of the receiving paperwork/BOL before the driver leaves your dock. Damage should be documented photographically and the product held "as is" for inspection by the carriers representative before processing further.
- Customer's sole recourse for reimbursement of damaged product cost is through the Carrier's freight claim process.
- Please contact Hogebuilt Customer Service for any required support or to suggest packaging improvements.



RETURN GOODS POLICY

- Material may be returned to Hogebuilt when a Return Material Authorization (RMA) number has been issued.
- Returns must be received by Hogebuilt within 30 days of receiving RMA number.
- Parts to be returned must have been purchased directly from Hogebuilt within the last 12 months. Proof of purchase is required.
- Parts purchased through a Dealer must be returned to that distributor. This includes drop shipped parts, as well.
- All return documentation should reference the original Hogebuilt invoice number.
- Parts must be in new and re-salable condition and should be in their original packaging.
- Customer is responsible for packaging parts for protection in transit.
- Damaged, rusted, repainted, used, reconditioned, altered or incomplete parts are not eligible for return.
- All return material must be shipped freight pre-paid to the address provided on the RMA.
- Parts are subject to a standard 15% re-stocking fee. Additional fees may be assessed pending further inspection.
- Obsolete, custom or proprietary parts are not eligible for return.
- Annual return amount is limited to 5% of the prior year's purchases.

WARRANTY

- Hogebuilt warrants its parts and products against defects in workmanship and material for a period of one year from the date of purchase. Any claim not submitted within this period shall conclusively be deemed waived by the buyer. Buyer agrees to indemnify Hogebuilt against any claim(s) made by buyer's subsequent customers or assignees of the purchased product.
- Fenders must be installed with Hogebuilt mounting brackets in order for the one year warranty to be valid.
- For warranty claims, please contact:
Hogebuilt Customer Service at 800-421-1589
Email: customerservice@hogebuilt.com
Website: hogebuilt.com/warranty-claim/
- Repair or replacement will be made at Hogebuilt's discretion upon inspection of the goods. No orders are to be returned without expressed consent and direction of Hogebuilt.

HODGEBUILT
HOAGEBUILT
\\hōg-bilt\\
HODGEBUILT®
THE BEST

784 Bill Jones Industrial Drive, Suite B
Springfield, TN 37172
Phone: 800-421-1589 • Fax 800-421-1589
sales@hodgebuilt.com • customerservice@hodgebuilt.com

HODGEBUILT® 
THE ULTIMATE FINISH FOR TRUCKS
Made in USA

HODGEBUILT.COM | 800.421.1589